

TDI Quick Start Guide

The figure below shows the input and output interface for the TDI. Refer to it for the instructions below.

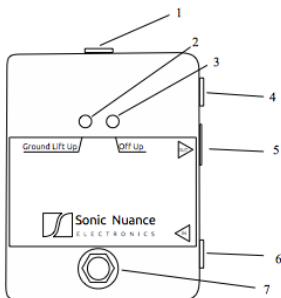
1) While the power switch (3) is in the OFF position, connect the XLR plug to the XLR jack (5).

2) Once 48V power (on XLR jack (5)) or DC power (on DC jack (1) - center negative regulated 9 to 24V) is provided, put the power switch (3) in the ON position.

3) Make sure the TDI is displaying a note and not the letter "P"

4) Connect your instrument to the input jack (6)

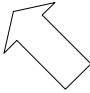
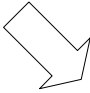
5) Put the instrument's volume to maximum and begin tuning



Tune going from flat to sharp while slowly turning the instrument's tuning machine. Pluck a **single note at a time** (you should mute the strings not being tuned) and the display window will indicate the note that is being played. A dot in the lower right corner of the display indicates the snote is sharp (#).

Tune your string up or down until the green "in tune" light is displayed and a sequence of red light go toward it in a flashing pattern indicating proper tuning is achieved.

The table below shows the mapping between the LED tuning indicators and the level of tuning.

Tuning Indicators	Description
● ○ ○ ○ ○	Flatter Note 
●● ○ ○ ○	
○ ● ○ ○ ○	
○ ●● ○ ○ ○	
○ ○ ● ○ ○	In tune (plus momentary flashing indicator)
○ ○ ●● ○ ○	Sharper Note 
○ ○ ○ ● ○ ○	
○ ○ ○ ●● ○ ○	
○ ○ ○ ○ ●	

6) Press the footswitch (7) to enter "play" mode

7) Enjoy the sonic nuances you will be hearing as you make great music!

For more information, see the full manual available at www.sonicnuance.com



Sonic Nuance
ELECTRONICS, LLC